




Spare Parts List :

No.	Pictures	Quantity
①		1
②		3
③		3

No.	Pictures	Quantity	Extra
④		3	1
⑤		3	1
⑥	 M8X40	3	1
⑦	 M8X25	12	1




PW-037/PW-037-1



Assembly Instructions

1


1, Assembling the connector and wooden legs, exactly align to the hole as the picture ,then fix the wooden legs .

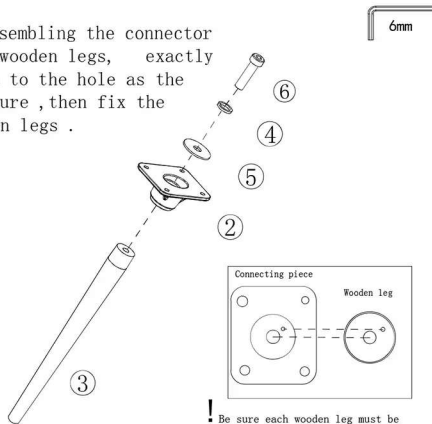

! Be sure each wooden leg must be aligned to the right positioning hole then fixed screw. Ensure the correct angle.

2

2, Assembling the tabletop and legs. Please pay attention to the fitting direction .

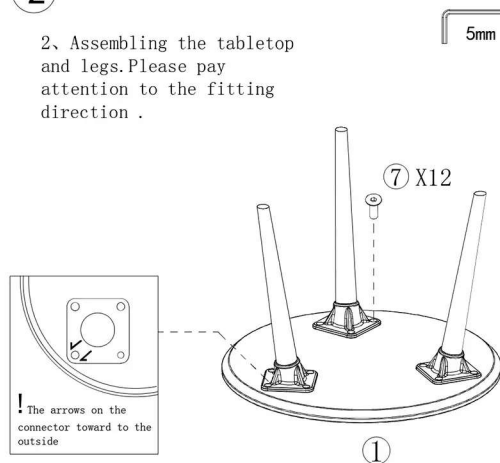

! The arrows on the connector toward to the outside